 
ROUND CONTROL 2,4,6 TYPE:

INSTALLATION SHEET


PROJECT NAME:


round control 2



round control 4



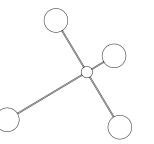

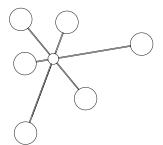

round control arm 1



black painted white painted

T100P1DZL T100P1DWL

round control arm 2



black painted white painted

T100P2DZL T100P2DWL

round control arm 3



black painted white painted

T100P3DZL T100P3DWL

X

 
round control arm 4



black painted white painted

T100P4DZL T100P4DWL

round control arm 5



round control 2 base



black painted white painted





black painted white painted



black painted white painted

tossB®



T100H1DZL

T100H1DWL

T100H2DZL T100H2DWL




T100H3DZL T100H3DWL

roun

ROUND CONTROL 2,4,6 TYPE:

INSTALLATION SHEET

PROJECT NAME:

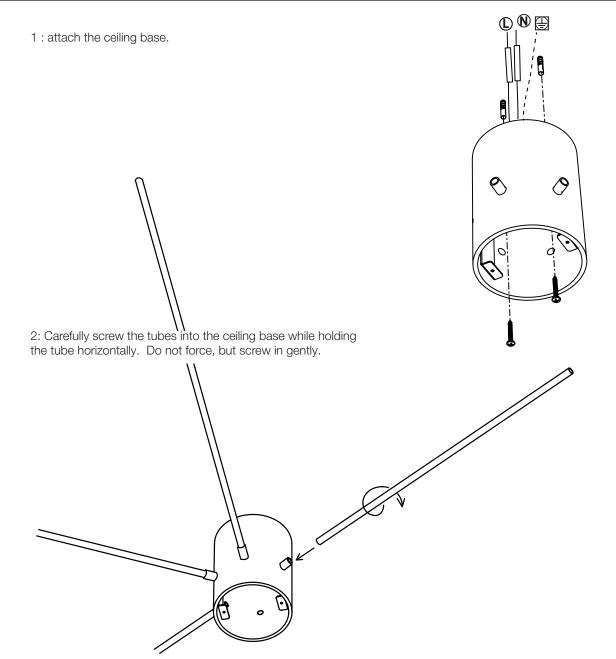

NOTE: if the tubes need to be directed in a certain way they can also be attached before installing the base.

General installation and maintenance directives concerning factory guarantee. Connecting and testing the lamps must always happen by an acknowledged electrician according to the locally applying regulations on electric installations. Do not place on a flammable surface. All class I lamps must be earthed in the cable clamp marked with a \oplus -sign. Class II lamps may not be earthed. Disconnect from the main supply when fitting lamp or changing bulb.


This lamp satisfies to the low tension directive 73/23/EEG with modification 93/68/EEG and the EMC directive 89/336/EEG with modifications 92/31/EEG and 93/68/EEG.


tossB°

ROUND CONTROL 2,4,6 TYPE:

INSTALLATION SHEET

PROJECT NAME:

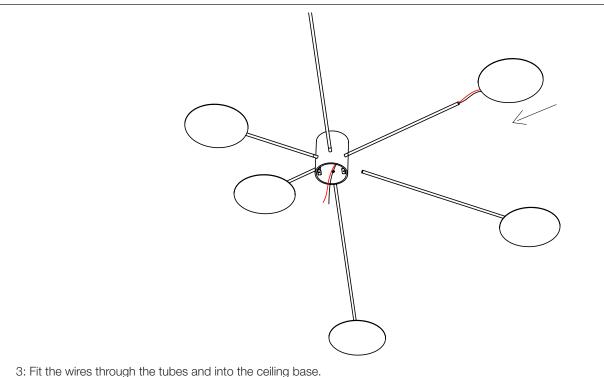

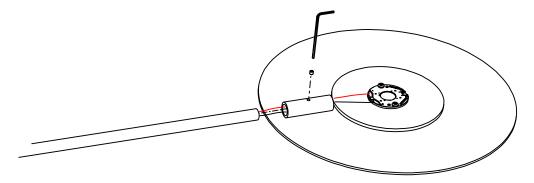

4: attach the disc to the tube and fix with the hex screw.

 
General installation and maintenance directives concerning factory guarantee. Connecting and testing the lamps must always happen by an acknowledged electrician according to the locally applying regulations on electric installations. Do not place on a flammable surface. All class I lamps must be earthed in the cable clamp marked with a @-sign. Class II lamps may not be earthed. Disconnect from the main supply when fitting lamp or changing bulb.


This lamp satisfies to the low tension directive 73/23/EEG with modification 93/68/EEG and the EMC directive 89/336/EEG with modifications 92/31/EEG and 93/68/EEG.




WWW.TOSSBLIGHTING.COM Last updated: 2/20/20

A Luminart BRAND



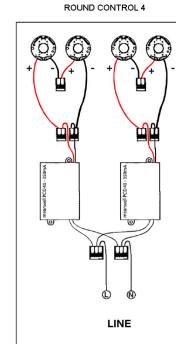

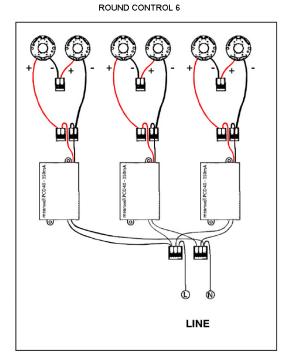

ELECTRICAL CONNECTION: SERIAL

TWO LIGHTS PER DRIVER

MUST BE WIRED IN SERIES

ROUND CONTROL 2,4,6 INSTALLATION SHEET

7: place the cover plate.

5: make the electrical connection. (see electrical scheme below) 6: fit the drivers inside the box and fix the bracket with the magnet.

PROJECT NAME:

TYPE:

tossB°

SPECIFICATION SHEET