
# **TYPE:**


# **PROJECT NAME:**


bow I, II, III

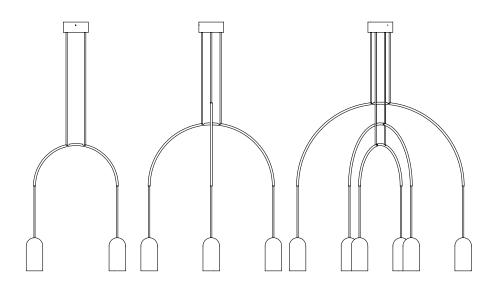

bow III

black painted









X

T97H7IZL

120V 6x15W

bow III S+M+L



### **TYPE:**


#### **PROJECT NAME:**

#### SUSPENDING THE BOW

SUSPEND THE BOW AND ADJUST AS REQUIRED.

### WIRING AND CANOPY INSTALLATION

- A- ADJUST THE POWER CABLE LENGTH TO POSITION. CUT THE CABLE SURPLUS.
- B- RAISE THE CROSSBAR AGAINST THE CEILING AND FASTEN TO THE JUNCTION BOX USING (2) MOUNTING SCREWS.
- C- MAKE ALL NECESSARY CONNECTIONS (FOLLOWING WIRING DIAGRAM AND POLARITY MARKING) USING THE TWIST CONNECTORS (NOT INCLUDED). MAKE THE CONNECTION FIRST AND INSTALL THE CROSSBAR AFTER.
- D- PLACE THE CANOPY OVER THE CROSSBAR AND SECURE ASSEMBLY IN PLACE WITH (2) SCREWS.

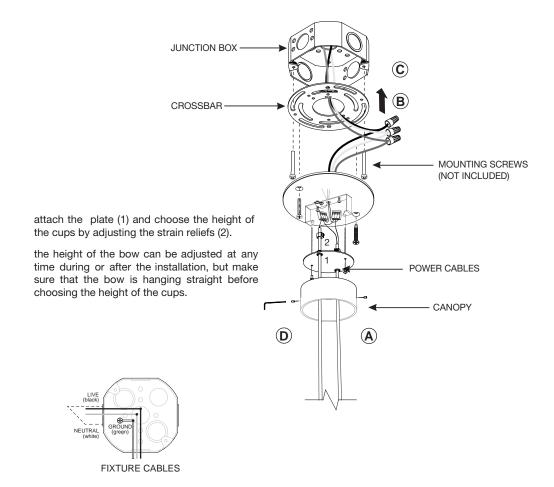

General installation and maintenance directives concerning factory guarantee. Connecting and testing the lamps must always happen by an acknowledged electrician according to the locally applying regulations on electric installations. Do not place on a flammable surface.

