


# THIN & THIN BIG

INSTALLATION SHEET

TYPE:

PROJECT NAME:

## thin & thin big

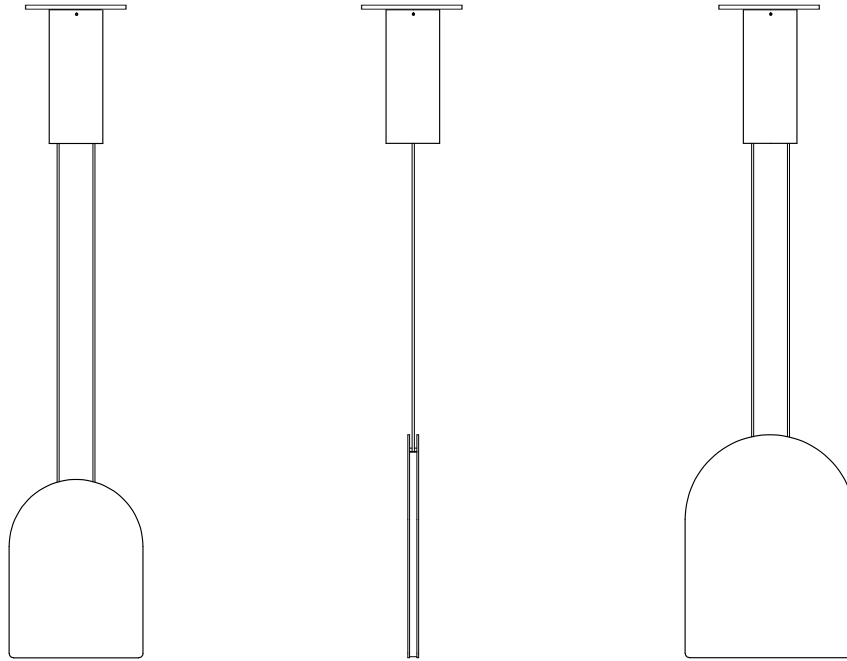

### thin



black painted  
white painted

**T99H1DZL**  
**T99H1DWL**

### thin big



black painted  
white painted

**T99H2DZL**  
**T99H2DWL**



INSTALLATION SHEET

**tossB**<sup>®</sup>

A **Luminart** BRAND

WWW.TOSSBLIGHTING.COM

Last updated: 3/12/20

# THIN & THIN BIG

## INSTALLATION SHEET

TYPE:


PROJECT NAME:

### SUSPENDING THE THIN

SUSPEND THE THIN WITH THE TWO STEELCABLES. ADJUST AS REQUIRED.

### WIRING AND CANOPY INSTALLATION

- A- ADJUST THE POWER CABLE LENGTH AND TIGHTEN THE POWER GRIP, TO LOCK POSITION. CUT THE CABLE SURPLUS.
- B- RAISE THE CROSSBAR AGAINST THE CEILING AND FASTEN TO THE JUNCTION BOX USING (2) MOUNTING SCREWS.
- C- MAKE ALL NECESSARY CONNECTIONS (**FOLLOWING WIRING DIAGRAM AND POLARITY MARKING**). MAKE THE CONNECTION FIRST AND INSTALL THE CROSSBAR AFTER.
- D- PLACE THE CANOPY OVER THE CROSSBAR AND SECURE ASSEMBLY IN PLACE WITH (2) SCREWS.

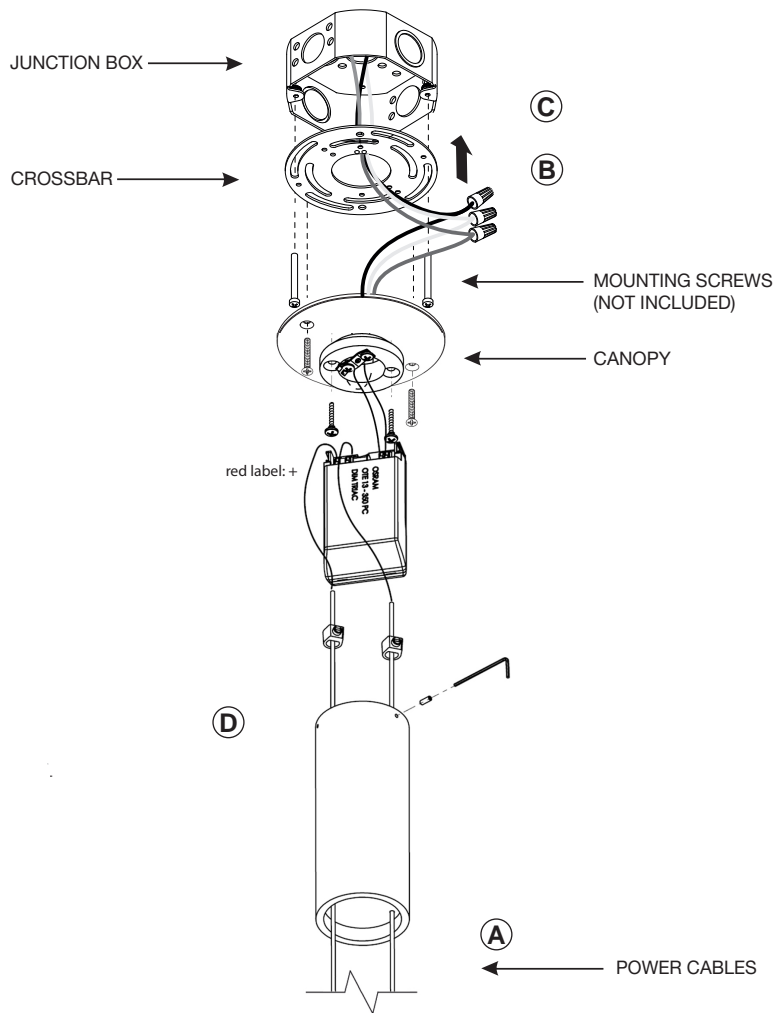

General installation and maintenance directives concerning factory guarantee. Connecting and testing the lamps must always happen by an acknowledged electrician according to the locally applying regulations on electric installations. Do not place on a flammable surface.

INSTALLATION SHEET

**tossB**<sup>®</sup>

A **Luminart** BRAND

WWW.TOSSBLIGHTING.COM

Last updated: 3/12/20